

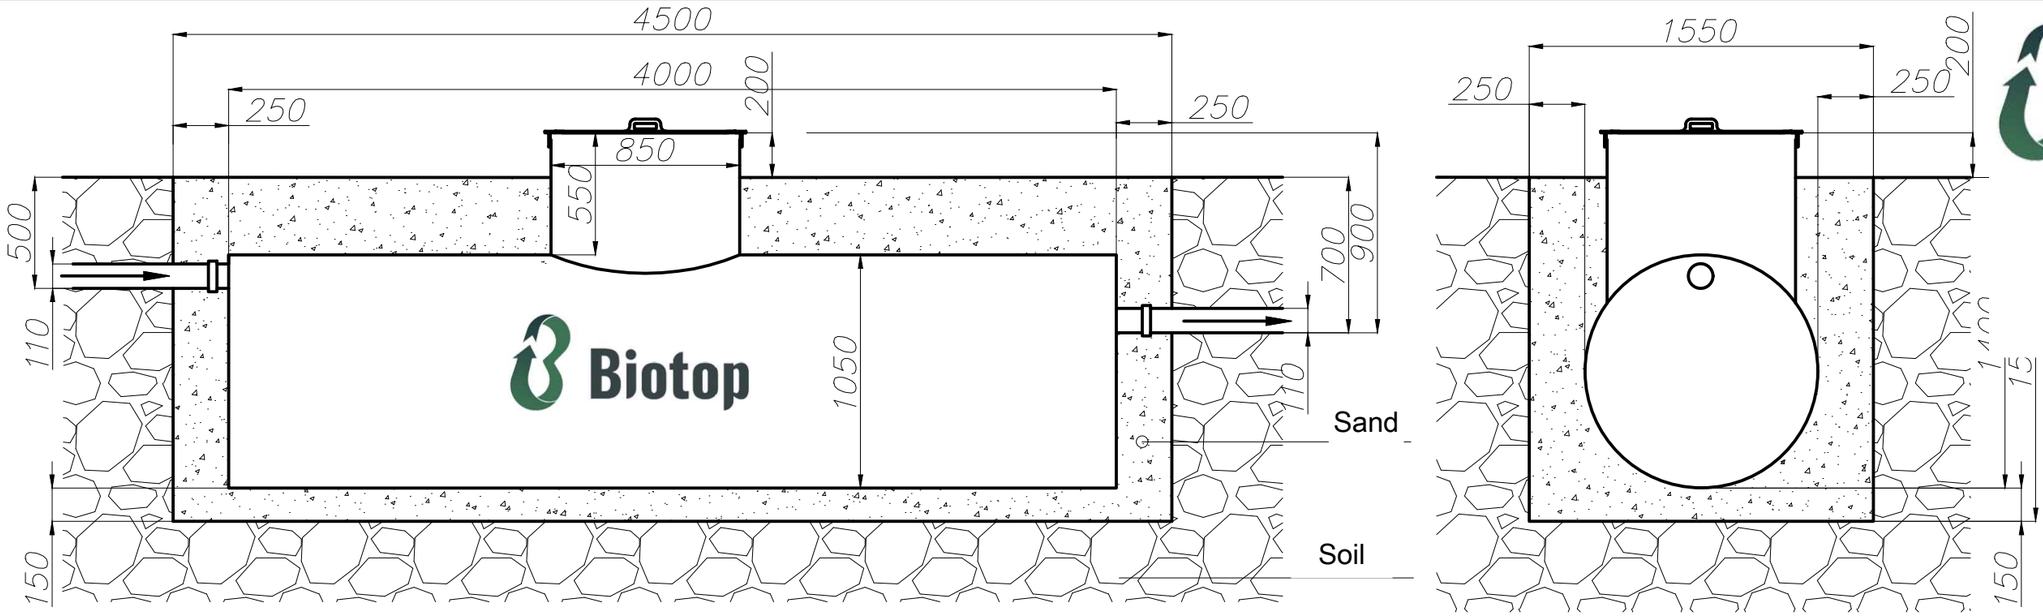


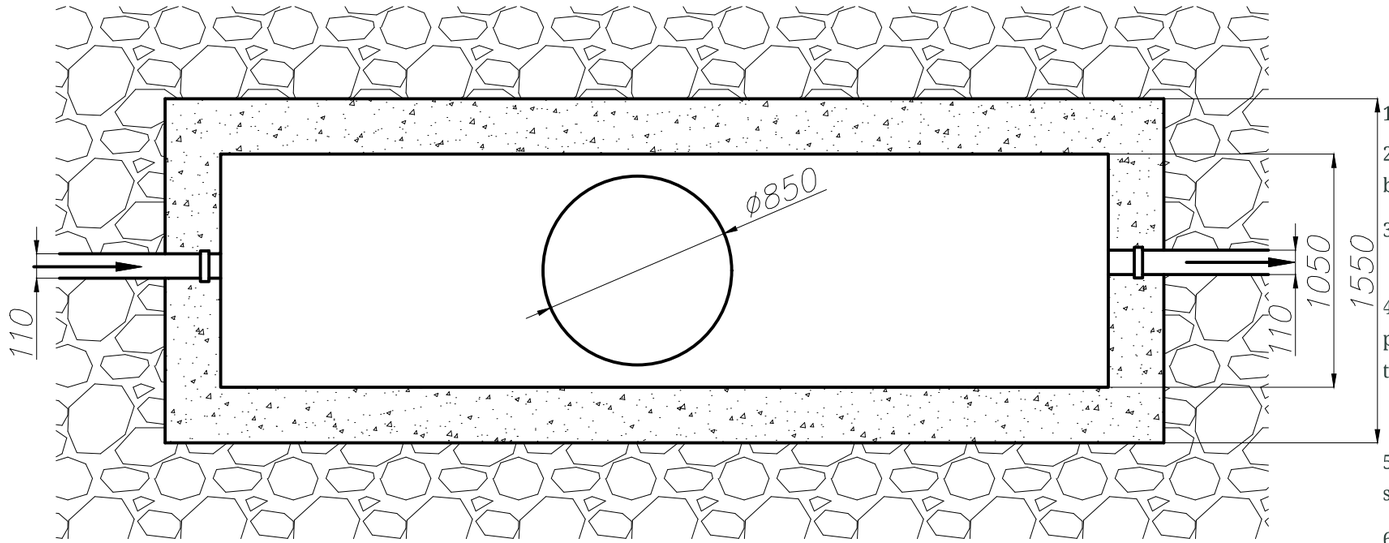

Station installation diagram

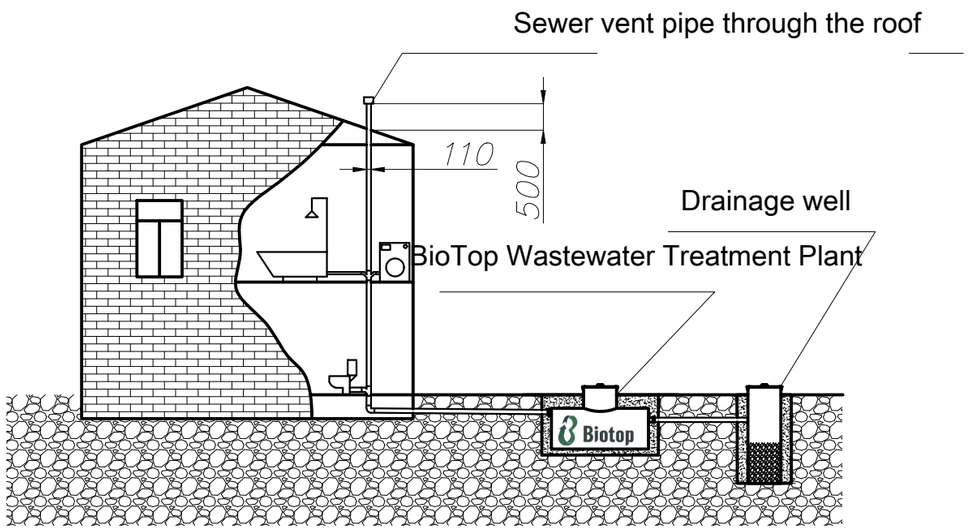

Instructions for assembly:

1. Prepare a pit measuring 4.5 x 1.55 x 1.55 meters.
2. In case of high groundwater level, lay sand and concrete or a slab at the bottom of the pit.
3. Pour a 150 mm thick sand layer and compact it well.
4. Install the station on top of the sand bed in a completely horizontal position. If there is a slab, secure the station to the slab with two straps. If there is no groundwater, no securing is necessary.
5. Backfill with sand in layers, compacting each one, and at the same time, fill the station with water.
6. Keep the neck portion 150-200 mm above ground level.

Backfill sand volume	7.5 m^3
Water volume	2.5 m^3
Excavation volume	10.8 m^3
Weight	194 kq

Biotop
+995 32 2 193 310
office@biotop.ge
www.biotop.ge

2025

LLC POLYMER GROUP

Fully biological wastewater treatment plant
horizontal configuration

Biotop - 12

2.5 m³/day
(10-12 people)

Biotop

Формат: А3

Согласовано

Взам. инв N

Подп. и дата

Инв. N подл.