
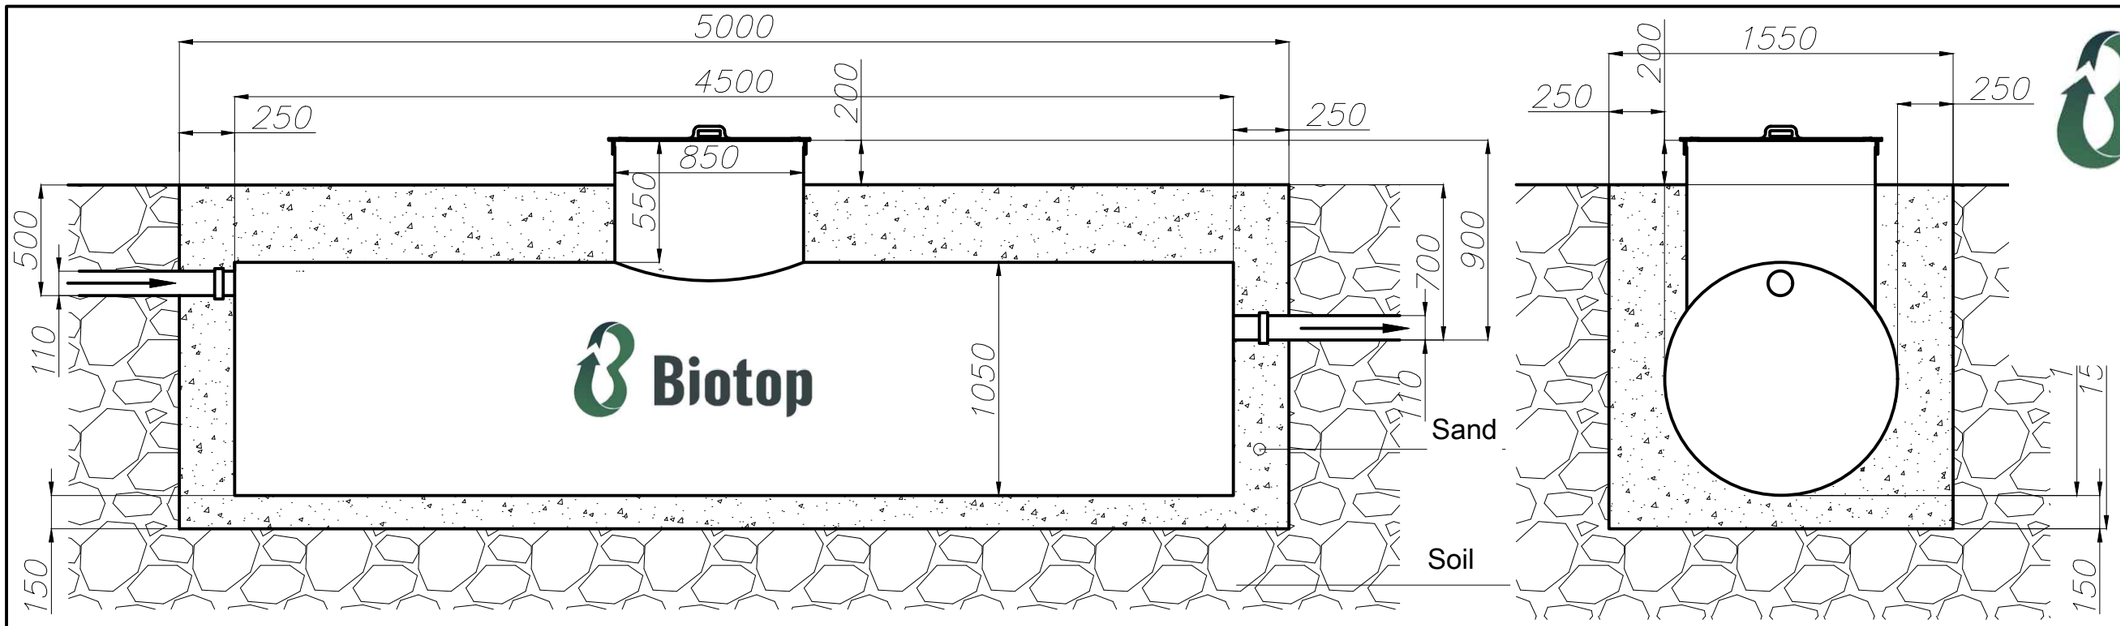
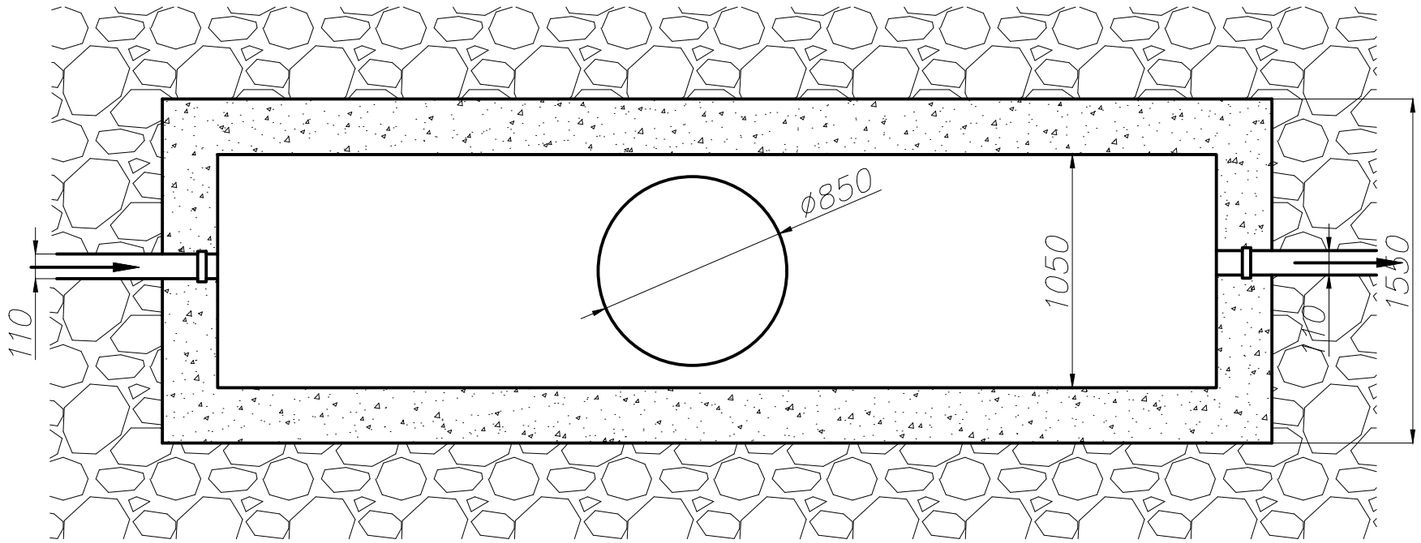



Station installation diagram

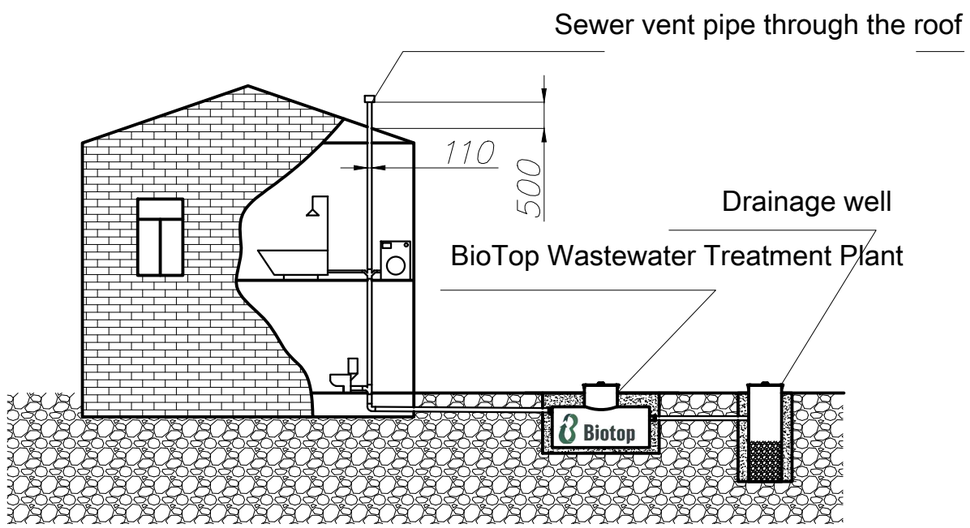


**Instructions for assembly:**

1. Prepare a pit measuring 5 x 1.55 x 1.55 meters.
2. If the groundwater level is high, lay a sand and concrete or a slab at the bottom of the pit.
3. Pour a 150 mm thick sand layer and compact it well.
4. Install the station on the sand pad in a completely horizontal position. If there is a slab, secure the station to the slab with two straps. If there is no groundwater, no securing is necessary.
5. Backfill with sand in layers, compacting each one, and at the same time, fill the station with water.
6. Keep the throat 150-200 mm above ground level.

| | |
|---|---|
| Backfill sand volume | 8.3 $m^3$ |
| Water volume | 2.8 $m^3$ |
| Excavation volume | 12.0 $m^3$ |
| Weight | 210 kg |

Biotop
+995 32 2 193 310
office@biotop.ge
www.biotop.ge

*LLC POLYMER GROUP*

Fully biological wastewater treatment plant
horizontal configuration

*Biotop - 15*

3 m³/day
(12-15 people)

2025

Biotop

Формат: А3

Согласовано

Взам. инв N

Подп. и дата

Инв. N подл.