

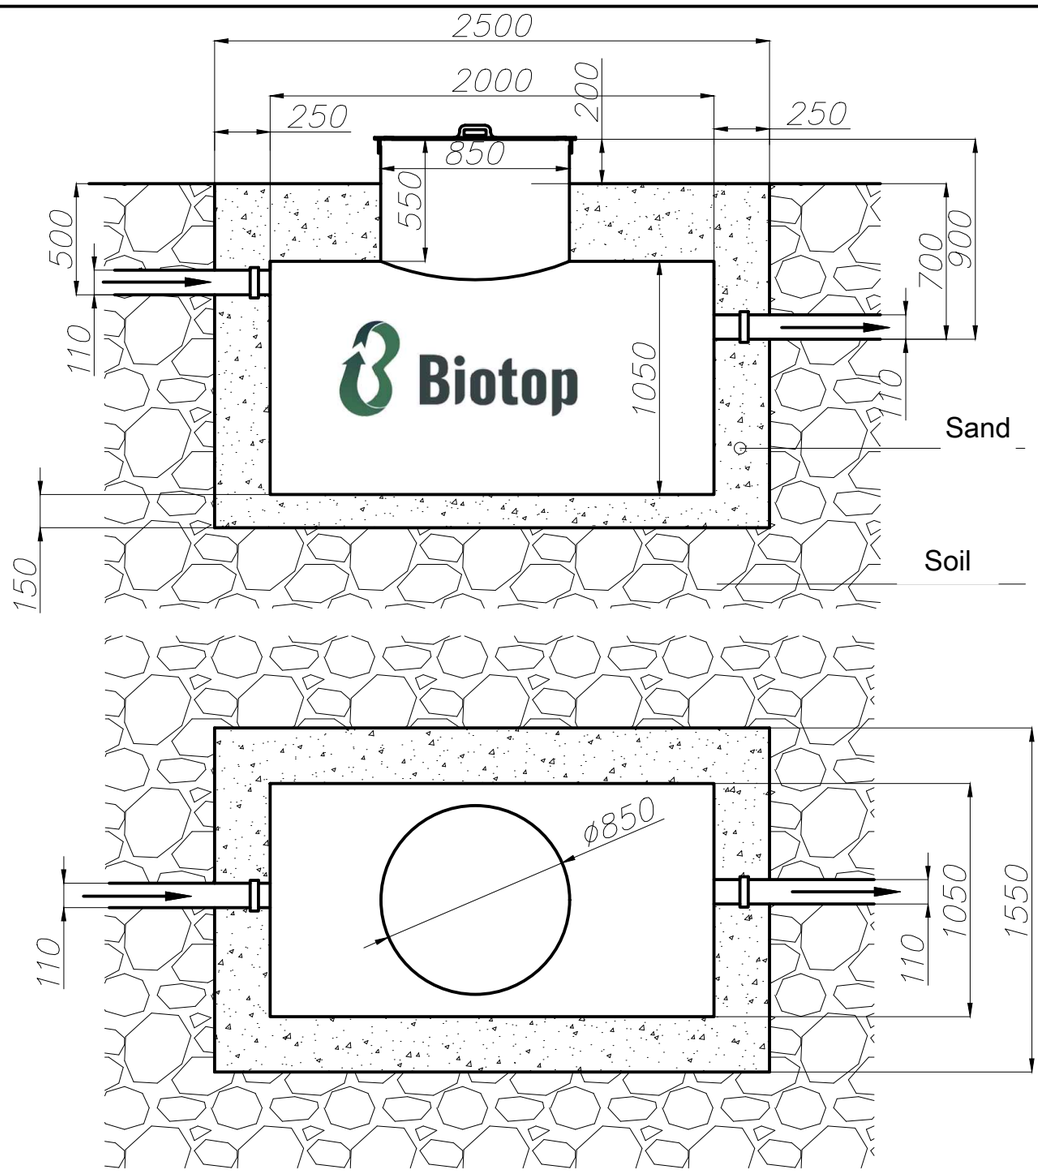


Station installation diagram

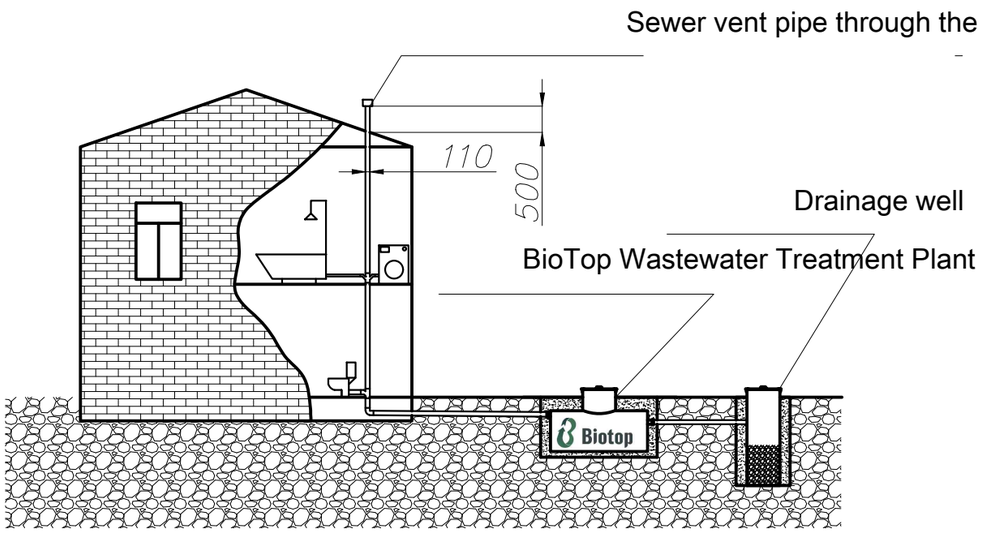

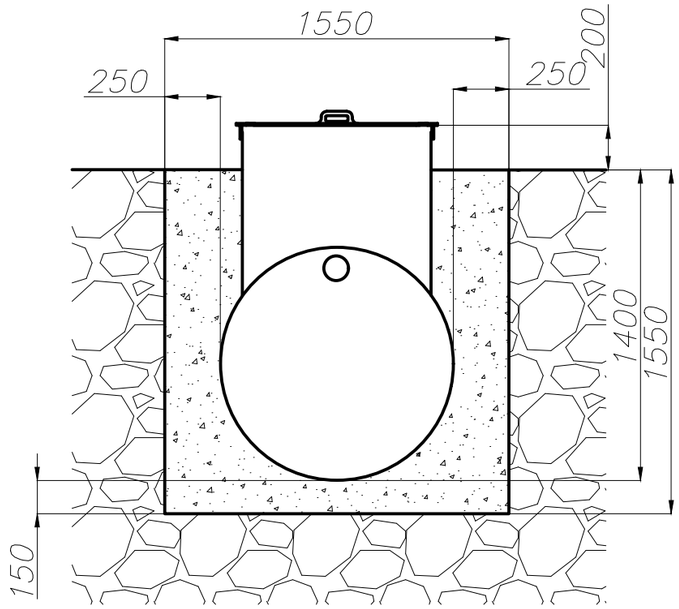

Biotop
+995 32 2 193 310
office@biotop.ge
www.biotop.ge

Instructions for installation:

1. **Prepare a pit measuring 2.5 x 1.55 x 1.55 meters.**
2. **In case of high groundwater level, lay a sand and concrete or a slab at the bottom of the pit.**
3. **Pour a 150 mm thick sand bed and compact it well.**
4. **Install the station on top of the sand bed in a completely horizontal position. If there is a slab, secure the station to the slab with two belts. If there is no groundwater, no securing is necessary.**
5. **Backfill with sand in layers, compacting each one, and simultaneously fill the station with water.**
6. **Keep the neck of the well 150-200 mm above ground level.**

Backfill sand volume	4.3 m^3
Water volume	1.3 m^3
Excavation volume	6.0 m^3
Weight	130 kg

LLC POLYMER GROUP

Fully biological wastewater treatment plant
horizontal configuration

Biotop - 4

0.8 m³/day
(2-4 people)

2025

Biotop

Формат: А3

Согласовано

Взам. инв. N

Подп. и дата

Инв. N подл.