

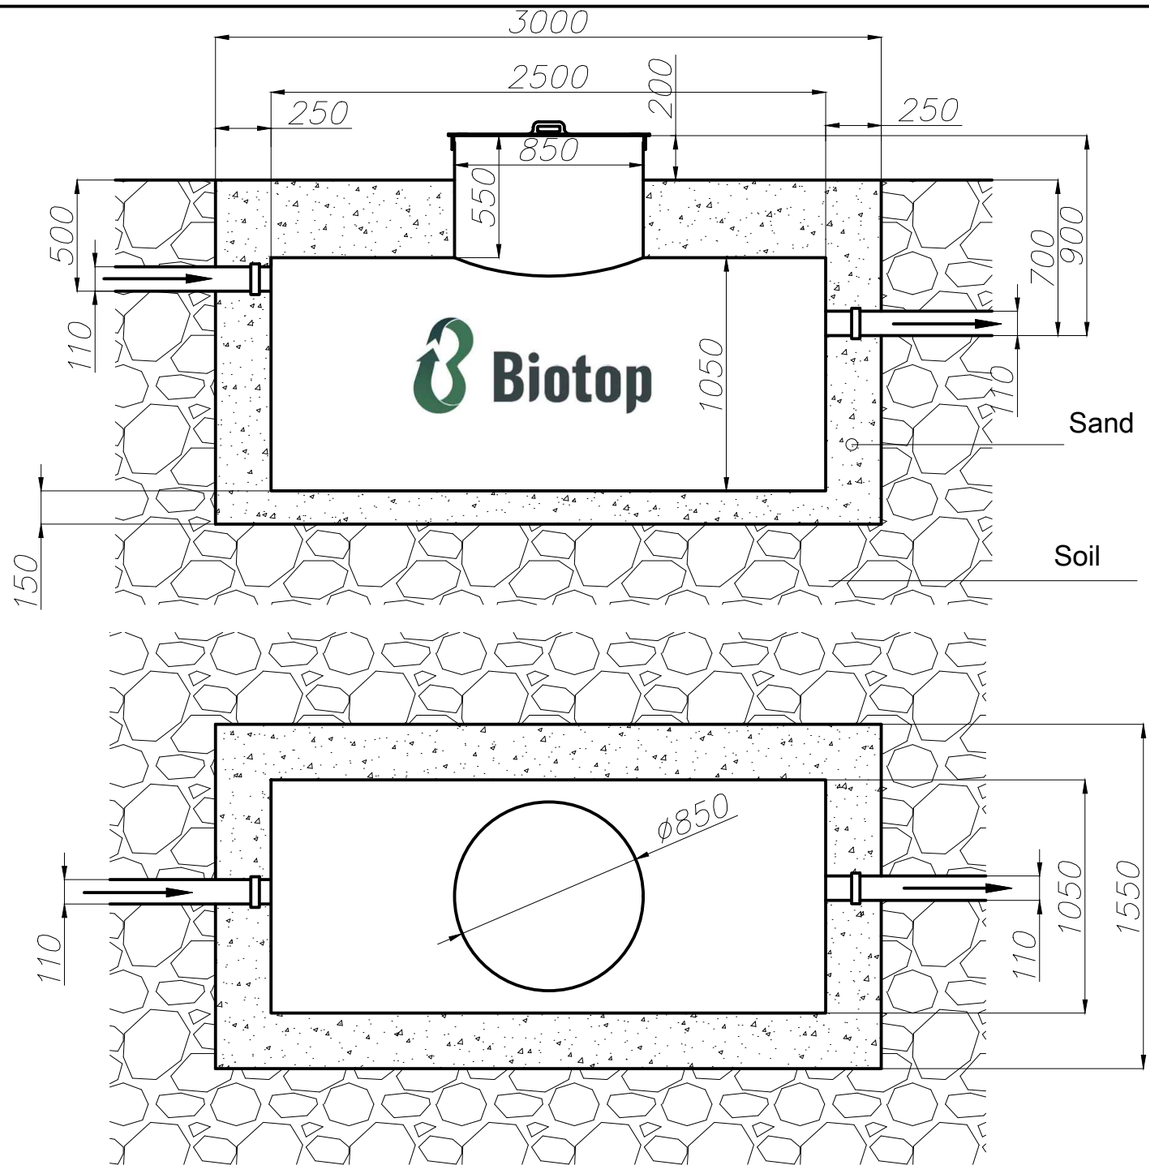


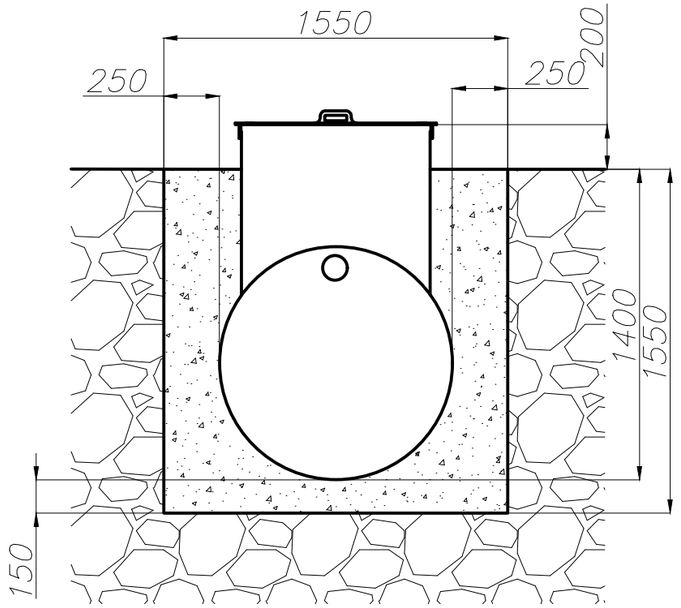

Station installation diagram

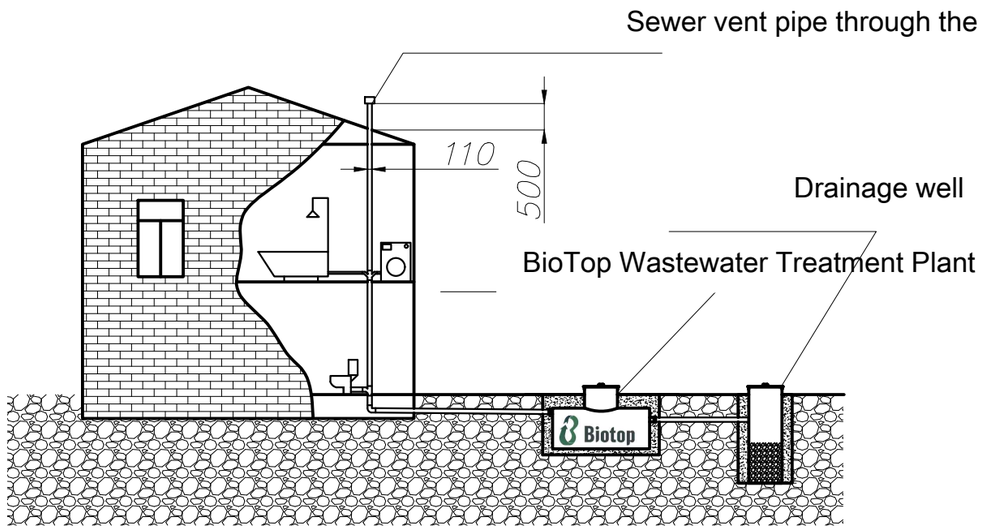

Assembly instructions:

1. Prepare a pit measuring 3 x 1.55 x 1.55 meters.
2. If the groundwater level is high, lay a sand and concrete or a slab at the bottom of the pit.
3. Pour a 150 mm thick sand bed and compact it well.
4. Install the station on the sand bed in a completely horizontal position. If a slab is present, secure the station to the slab with two straps. If there is no groundwater, no securing is necessary.
5. Backfill with sand in layers, compacting each one, and simultaneously fill the station with water.
6. Keep the neck 150-200 mm above ground level.

Backfill sand volume	5.1 m^3
Water volume	1.6 m^3
Excavation volume	7.2 m^3
Weight	14.2 kq

Biotop
+995 32 2 193 310
office@biotop.ge
www.biotop.ge

LLC POLYMER GROUP

Fully biological wastewater treatment plant
horizontal configuration

Biotop - 6

1.2 m³/day
(4-6 people)

2025

Biotop

Формат: А3

Согласовано

Взам. инв. N

Подп. и дата

Инв. N подл.